

Soda Gun Jetter Operation Guide

1 – 4 soda guns

Overview

The Soda Gun Jetter is a soda gun cleaner with a programmable controller designed primarily for cleaning bar soda guns. The 2 channel controller is programmable to run up to 44 events that can be set for a specified amount of time to run the system. We recommend 10 cycles, (5) 1 minute cycles per channel with 1 minute between cycles (unit comes preprogrammed to run at 04:00) **System comes preprogrammed, however if needed instruction are provided.**

Warnings

Installation of Soda Gun Jetter LLC products must meet all applicable electrical codes and regulations established by national, city, county, or other agencies. It is possible that electrical codes and regulations require that a certified electrical contractor or engineer perform the electrical installation. For questions, contact a certified electrician.

All installations must conform to local plumbing codes. Water installation should be done by a licensed plumber.

Operational Requirements

For indoor use only

Main Power

120 VAC 60 HZ (12volt dc power adapter)

Connection to hot water supply.

The integrity and operational characteristics of this unit are not guaranteed outside the above mentioned parameters. Use of this unit outside of these parameters nullifies warranty.

Operation

Unit comes preprogrammed However if changes are needed follow these instructions.

Programming the system - Reset timer before programming.

Note: If a mistake is made during the programming, simply push the reset button and start over.

Set the Time and Day and Date

When the unit arrives the display may be blank pressing a button will bring out of sleep mode.

To set the time, day, and date, press the **Menu** button then press the + key until the clock symbol is flashing and DAT/TIME is displayed. Press **ok**, Use the + or - to set year, press **ok**, use the + or - to set month, press **ok**, use + or - to set day, press **ok** set hour using + or - press **ok** set minute using + or - key press **ok**. To use daylight savings time press **ok** when sum/win is display then press + or - until with sum is displayed, press **ok**. Next press + until us/can is displayed and press **ok**. **Time format is 24 hour. (00:00-23:59)**

If daylight savings time is not observed simply press + until no sum is displayed and press **ok** after setting minutes.

Programming the cleaning cycles (system comes preprogrammed)

Up to 44 independent cleaning cycles can be programmed

Note: To program a full cycle, a cycle start time and stop time will have to be programmed.

Warning : THE SYSTEM WILL RUN FOR 23 HRS 59 MIN IF A START TIME IS SET BUT NOT A STOP TIME.

RESET PROGRAMS

Press **menu**, use + or – to display program, press **ok**. Press + until display shows clear , press + until display shows all and press **ok**, press **ok** after confirm is displayed. (all programs are erased)

PROGRAMMING EVENTS

1. Press **menu** until program is displayed and press **ok**
2. New program will be displayed press **ok**, amount of free programs will be displayed press **ok**,
3. Channel c1 is displayed press **ok**,
4. Time on is displayed press **ok**, hour is displayed press + or – to set desired start hour press **ok**, minute is displayed, press + or – to set desired minute, press **ok**
5. Monday is displayed press **ok**, copy is displayed press **ok** add tu is displayed continue pressing **ok** until new program is displayed.
6. Press **ok**, use + or – to display time off, press **ok** hour is displayed press + or – to set desired stop hour press **ok**, minute is displayed, press + or – to set desired minute, press **ok**
7. Monday is displayed press **ok**, copy is displayed press **ok** add tu is displayed continue pressing **ok** until new program is displayed. Repeat these steps until the desired cycles are programmed.
8. Press **menu** until program is displayed and press **ok**
9. New program will be displayed press **ok**, amount of free programs will be displayed press **ok**,
10. Channel c1 is displayed press + until channel c2 is display press **ok**,
11. Time on is displayed press **ok**, hour is displayed press + or – to set desired start hour press **ok**, minute is displayed, press + or – to set desired minute, press **ok**
12. Monday is displayed press **ok**, copy is displayed press **ok** add tu is displayed continue pressing **ok** until new program is displayed. Repeat these steps until the desired cycles are programmed.

Testing Unit

1. Press the **menu** button until manual is displayed and press **ok**, channel c1 will be displayed.
2. Press **ok** and override will be displayed press + until perm on is displayed and press **ok**. Channel is now on.
3. Press **menu** until manual is displayed, press **ok**, channel c1 is displayed press **ok** clear is displayed press **ok** channel is now off.
- 4 Press the menu button until manual is displayed and press ok, channel c1 will be displayed. Press + until c2 is displayed. Repeat steps 2 and 3 to test channel 2

INSURE BOTH CHANNELS ARE OFF AFTER TESTING

When the unit is powered the first time, the rechargeable display back up battery begins charging.

When fully charged it provides approximately 200 hours of reserve time before the display and program may be lost. If the unit loses power, it will not lose the program for 200 hours, but it will not run the system from the rechargeable display back up battery. If the unit becomes unplugged from the wall for a short amount of time, plugging the unit back in will not affect the programming done to the unit.

*** Note place soda guns securely into holsters at the end of the night.**



SODA GUN JETTER LLC

Product Warranty

Soda Gun Jetter LLC products are warranted against defective material and workmanship under normal use and service for one year from the date of manufacture. This limited warranty does not apply to any products that have a normal life shorter than one year or failure and damage caused by chemicals, corrosion, physical abuse, or misapplication. Rubber and synthetic rubber parts such as “O”-rings, diaphragms, PVC tubing, and gaskets are considered expendable and are not covered under warranty. This warranty is extended only to the original buyer of Soda Gun Jetter LLC products. If products are altered or repaired without prior approval of Soda Gun Jetter LLC this warranty is void. Defective units or parts should be returned to the factory with transportation prepaid. If inspection shows them to be defective, they will be repaired or replaced without charge, F.O.B. factory. Soda Gun Jetter LLC assumes no liability for damages. Return merchandise authorization number must be granted in advance of returned units for repair or replacement (See “Merchandise Returns” above).